

## MineNet Installation

1. Run the full install
  - a. Accept all default values
2. Overwrite MineNet.exe with the latest version (if necessary)
3. Install and Configure the BDE
  - a. Execute C:\MineNet\BDE5202InfoSetup\BDEInfoSetup.EXE
    - i. Click install BDE 5.2
    - ii. Accept all default settings
  - b. Run BDE Administrator (Control Panel or C:\Program Files\Common Files\Borland Shared\BDE)
  - c. Create the Alias
    - i. Database tab
    - ii. Object\New
    - iii. Standard
    - iv. Rename to " MineNet"
    - v. Set path to C:\MineNet\Data
    - vi. Apply changes
  - d. Set the NET control path
    - i. Configuration tab
    - ii. Configuration\Drivers\Native\Paradox
    - iii. Set NET DIR to C:\MineNet\Data
  - e. Set LOCAL SHARE to TRUE
    - i. Configuration\System\INIT
    - ii. Apply changes
    - iii. Close BDE Administrator (Save configuration)
4. Install the USB drivers
  - a. Connect MC-4011-USB and turn power on
  - b. When detected
    - i. Do not allow Windows to search for drivers
    - ii. Install from a specific location
    - iii. Search for best driver
    - iv. Include this location – Browse to C:\MineNet\USB Driver\MC-4011-USB
    - v. Continue Anyway
  - c. Repeat for USB Serial port detected